

Nuance Audio Charging Pad

Quick Start Guide



IT Guida rapida FR Guide de démarrage rapide ES Guía de inicio rápido DE Schnellstart-Anleitung

Charging IT Ricarica FR Chargement ES Carga DE Aufladen

1

USB-C

2

3

100 %

LED indicators IT Indicatori LED FR Voyants LED ES Indicadores LED DE LED-Anzeigen

20-100 %

0-20 %



Support nuanceaudio.com/contact-us

IT Supporto FR Assistance ES Soporte DE Hilfe



Luxottica Group S.p.A.
Piazzale Cadorna 3,
20123 Milan, Italy

This quick start guide is applicable to AAW0001EL & REL0063A0 Nuance Audio™ Charging Pad
IT Questa guida rapida è applicabile ai modelli Nuance Audio™ Charging Pad AAW0001EL e REL0063A0
FR Ce guide de démarrage rapide s'applique aux modèles de Nuance Audio™ Charging Pad AAW0001EL et REL0063A0
ES Esta guía de inicio rápido es aplicable a los modelos de Nuance Audio™ Charging Pad AAW0001EL y REL0063A0
DE Diese Schnellstart-Anleitung ist für die Modelle AAW0001EL und REL0063A0 des Nuance Audio™ Charging Pad gültig



Raccolta carta
Papel y cartón

