

Nuance Audio Remote Control

Quick Start Guide



IT Guida rapida FR Guide de démarrage rapide ES Guía de inicio rápido DE Schnellstart-Anleitung

1st pairing



IT Primo abbinamento FR Premier appairage ES Primer emparejamiento DE Erste Kopplung

1 Press & hold

IT Tieni premuto
FR Appuyez et maintenez
ES Mantenga pulsado
DE Gedrückt halten

2 Pull the tab

IT Tira la linguetta
FR Tirez sur la languette
ES Tire de la lengüeta
DE Lasche herausziehen

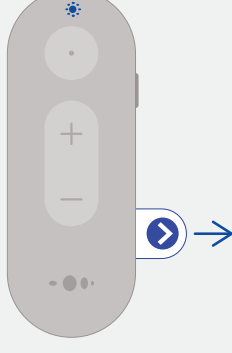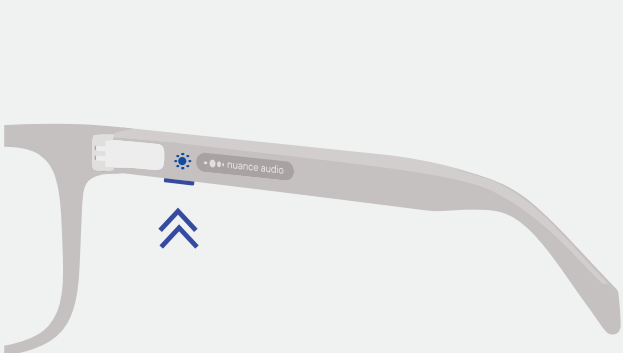

• **Blinking blue LED - Pairing in progress**
IT LED blu lampeggiante - Abbinamento completato
FR LED bleue clignotante : Appairage terminé
ES LED azul parpadeante - Emparejamiento completado
DE Blinkende blaue LED - Koppelung abgeschlossen

• **Solid blue LED - Pairing complete**
IT LED blu fisso - Abbinamento in corso
FR LED bleue fixe : Appairage
ES LED azul sólido - Emparejamiento en curso
DE Durchgehend blaue LED - Koppelung in Bearbeitung

Additional pairing

IT Abbinamento aggiuntivo FR Appairage supplémentaire ES Emparejamiento adicional DE Weitere Kopplung

1 A. Fold the glasses
B. Press & hold the button

IT A. Chiudi gli occhiali
B. Tieni premuto il pulsante
FR A. Repliez les lunettes
B. Appuyez et maintenez le bouton
ES A. Pliegue las gafas
B. Mantenga pulsado el botón
DE A. Die Brille falten
B. Die Taste drücken und halten

2 Press & hold the side button

IT Tieni premuto il pulsante laterale
FR Appuyez et maintenez le bouton latéral
ES Mantenga pulsado el botón lateral
DE Die Seitentaste drücken und halten



• **Release when Blue LED blinks**
IT Rilascia quando il LED blu lampeggia
FR Relâchez lorsque la LED bleue clignote
ES Suéltelo cuando el LED azul parpadee
DE Freigeben, wenn die blaue LED blinkt

Audio modes Press

IT Modalità audio Premere
FR Modes audio Appuyez
ES Modalidades de audio Presionar
DE Audio-Modus wählen Drücken




Volume Press +/-

IT Volume Premere +/-
FR Volume Appuyez sur +/-
ES Volumen Presionar +/-
DE Lautstärke einstellen +/- drücken



LED indications IT Indicazioni LED FR Indicateurs LED ES Indicaciones LED DE LED-Anzeigen

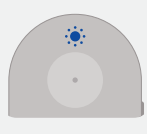


Reconnecting

IT Riconnessione
FR Reconnexion
ES Reconexión
DE Neu-Verbindung



Low battery




IT Batteria scarica
FR Batterie faible
ES Batería baja
DE Schwacher Akku

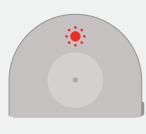

Glasses not found

IT Glasses non trovati
FR Glasses introuvables
ES Glasses no encontradas
DE Glasses nicht gefunden

Battery CR2450 IT Batteria CR2450 FR Batteries CR2450 ES Batería CR2450 DE Batterie CR2450

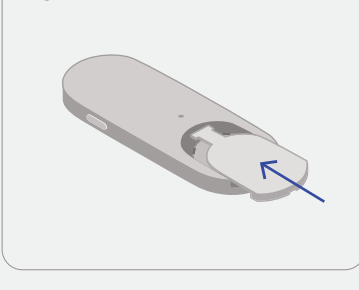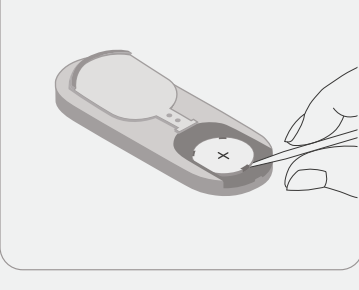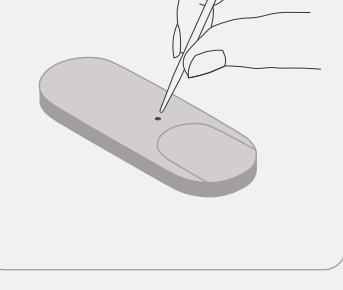

Support nuanceaudio.com/contact-us

IT Supporto FR Assistance ES Soporte DE Hilfe

Luxottica Group S.p.A.
Piazzale Cadorna 3,
20123 Milan, Italy

This quick start guide is applicable to AAW0002EL & REB0080A0 Nuance Audio™ Remote Control.
IT Questa guida rapida è applicabile ai modelli Nuance Audio™ Remote Control AAW0002EL e REB0080A0
FR Ce guide de démarrage rapide s'applique aux modèles de Nuance Audio™ Remote Control AAW0002EL et REB0080A0
ES Esta guía de inicio rápido es aplicable a los modelos de Nuance Audio™ Remote Control AAW0002EL y REB0080A0
DE Diese Schnellstart-Anleitung ist für die Modelle AAW0002EL und REB0080A0 der Nuance Audio™ Remote Control gültig