


• ● • nuance audio

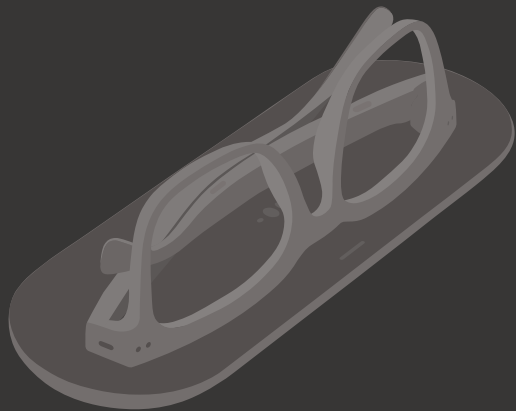

User Guide

[Manuale utente](#)

[Guide utilisateur](#)

[Guía del usuario](#)

[Benutzerhandbuch](#)

Overview


Panoramica

Vue d'ensemble

Aspectos generales




Übersicht

A	B	C
LED	Charging surface	USB-C port
LED	Superficie di ricarica	Porta USB-C
LED	Surface de chargement	Port USB-C
LED	Superficie de carga	Puerto USB-C
LED	Ladeoberfläche	USB-C-Anschluss

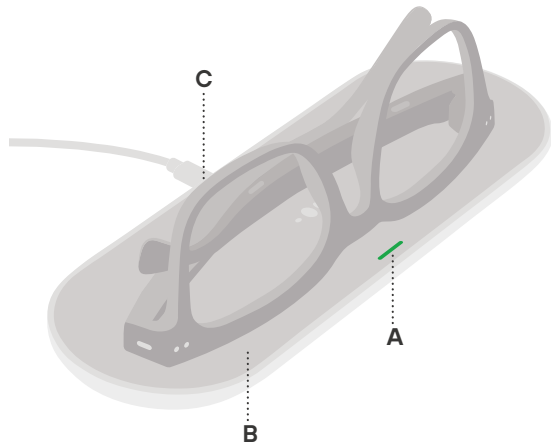

Charging

Ricarica Chagement Carga Aufladen

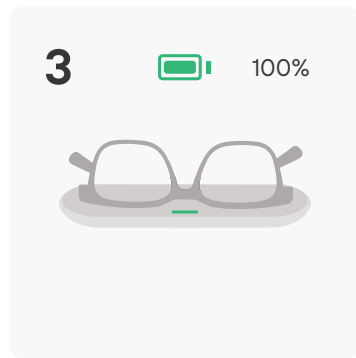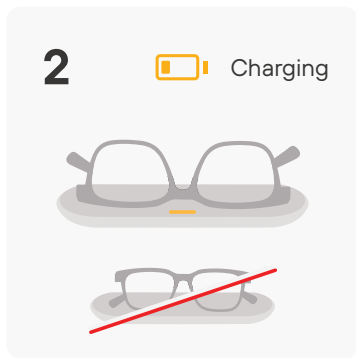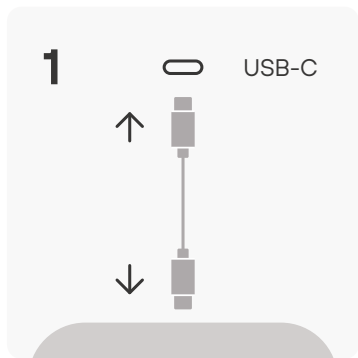

Ricarica Chagement Carga Aufladen


LED indicators

Indicatori LED

Voyants à LED

Indicadores LED

LED-Anzeigen

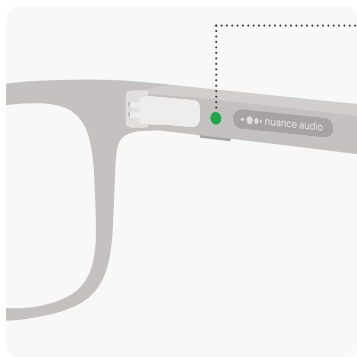

20-100%



0-20%

LED indicators

glow when your Glasses are folded or removed

Indicatori LED

si illuminano quando gli occhiali vengono piegati o rimossi

Voyants à LED

s'illuminent lorsque les lunettes sont pliées ou retirées

Indicadores LED

se encienden al quitarse las gafas o plegarlas

LED-Anzeigen


sie leuchten, wenn die Brille zusammengeklappt oder abgenommen wird

Support Supporto Assistance Ayuda Support

nuanceaudio.com/contact-us



This user guide is applicable to OAW5001, OAW5002, OAW5004 Nuance Audio Glasses models

 Luxottica Group S.p.A. Piazzale Cadorna 3, 20123 Milan, Italy



Raccolta carta
Papier y cartón

