

• ● • nuance audio



## User Guide

[Manuale utente](#)

[Guide utilisateur](#)

[Guía del usuario](#)

[Benutzerhandbuch](#)

## Overview

Panoramica Vue d'ensemble Aspectos generales Übersicht

### A

LED

LED

LED

LED

LED

### B

Volume level LEDs

LED del volume

LED de volume

Indicadores LED de volumen

Lautstärke-LEDs

### C

Volume button

Pulsante del volume

Bouton de volume

Botón de volumen

Lautstärketaste

### D

Audio mode button

Pulsante della modalità audio

Bouton du mode audio

Botón de modo de audio

Audiomodus-Taste

### E


Pairing button

Pulsante di abbinamento

Bouton d'appairage


Botón de emparejamiento

Kopplungstaste

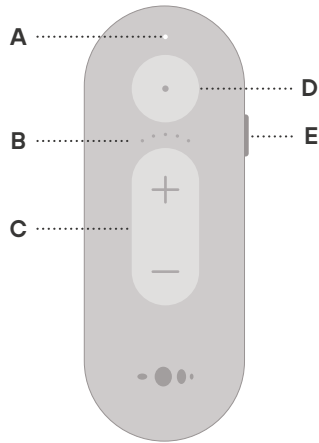

## Pairing

Abbinamento Association Emparejamiento Kopplung

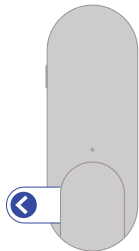

### 1a. First pairing, pull the tab, the blue LED will start blinking

Per il primo abbinamento: tira la linguetta,  
il LED blu inizierà a lampeggiare

Pour le premier appairage, tirez sur la  
linguette, la LED bleue se mettra à clignoter

Para el primer emparejamiento: tire de la  
lengueta, el LED azul empezará a parpadear

Erste Kopplung: Die Lasche ziehen, die blaue  
LED beginnt zu blinken




### 1b. For additional pairing, press & hold until the blue LED blinks

Per gli abbinamenti successivi, tieni premuto  
fino a quando il LED blu inizia a lampeggiare

Per il primo abbinamento: tira la linguetta, il LED  
blu inizierà a lampeggiare

Para emparejamientos adicionales, mantenga  
pulsado hasta que el LED azul parpadee

Für zusätzliche Kopplung: Gedrückt halten, bis  
die blaue LED blinkt

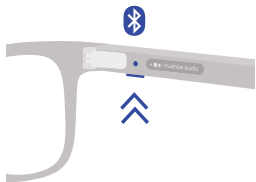

**2.**  
**Press & hold until the  
blue LED blinks**

Tieni premuto finché il LED  
blu inizia a lampeggiare

Pour le premier appairage,  
tirez sur la languette, la LED  
bleue se mettra à clignoter

Mantenga pulsado hasta que  
el LED azul parpadee

Gedrückt halten, bis die blaue  
LED blinkt



**3.**  
**keep close together until  
the blue LED is steady**

Mantieni vicini finché il LED blu  
non diventa fisso

Maintenez les appareils à  
proximité jusqu'à ce que la LED  
bleue reste fixe

Mantenga juntos hasta que el LED  
azul esté fijo

Nah beieinander halten, bis die  
blaue LED konstant leuchtet

## Audio modes

Modalità audio   Modes audio   Modos de audio   Audio-Modi


### Press to switch audio mode

Premi per passare alla modalità audio

Appuyez pour passer au mode audio

Pulse para cambiar el modo de audio

Drücken, um den Audiomodus zu wechseln

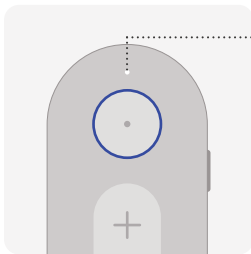

### LED indicators

- Frontal
- ☀ All-around

### Indicatori LED

Frontale  
Tutto intorno

### Voyants à LED

Devant  
Tout autour

### Indicadores LED

Frontal  
Alrededor

### LED-Anzeigen

Vorne  
Rundum


## Volume control

Controllo del volume

Contrôle du volume

Control del volumen

Lautstärkeregelung

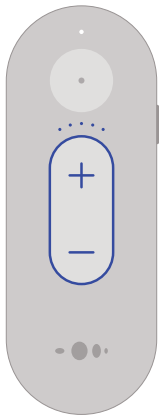

**Press +/- to adjust volume**

Observe the LED indicators

Premi +/- per regolare il volume

Osserva gli indicatori LED

Appuyez sur +/- pour régler le volume

Observez les voyants à LED

Pulse +/- para ajustar el volumen

Observe los indicadores LED

Zum Einstellen der Lautstärke +/- drücken

LED-Anzeigen beobachten


## Battery replacement

Sostituzione della batteria

Remplacement de la pile

Sustitución de la pila

Austausch der Batterie

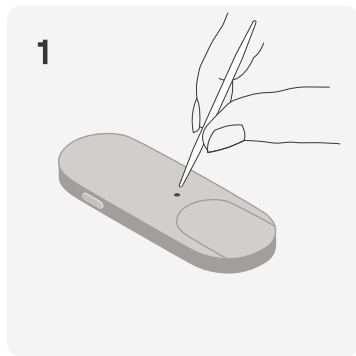

Batteria a bottone CR2450

Pile bouton CR2450

Pila de botón CR2450

CR2450-Knopfbatterie

## Lanyard attachment


Attacco per cordino

Fixation de la lanière


Fijación para la correa

Befestigung am Schlüsselband

1

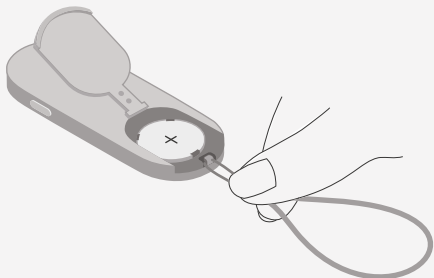

2

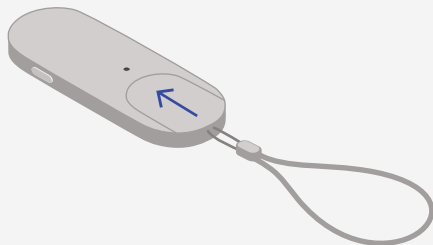

The lanyard is not included

Cordino non incluso

La lanière n'est pas incluse

La correa no está incluida

Das Schlüsselband ist nicht im Lieferumfang enthalten



## LED indications

Indicazioni LED

Voyants à LED

Indicaciones LED

LED-Anzeigen



- **Mode switch**

Cambio modalità

Changement de mode

Cambio de modalidad

Modus wechseln

- ✦ **Pairing & reconnecting**

Abbinamento e riconnessione

Appairage et reconnexion

Emparejamiento y reconexión

Kopplung & erneute Herstellung

einer Verbindung

- **Low battery**

Batteria scarica

Batterie faible

Batería baja

Niedriger Batteriestand

- ✦ **Nuance Audio Glasses not found**

Occhiali Nuance Audio non trovati

Lunettes Nuance Audio introuvables

Gafas Nuance Audio no encontradas


Nuance Audio Brille nicht gefunden

**Support** Supporto Assistance Ayuda Support

[nuanceaudio.com/contact-us](https://nuanceaudio.com/contact-us)



This user guide is applicable to OAW5001, OAW5002, OAW5004 Nuance Audio Glasses models

 Luxottica Group S.p.A. Piazzale Cadorna 3, 20123 Milan, Italy



Raccolta carta  
Papier y cartón

